 


Warning indicators

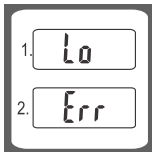

1. Replace new battery.
2. Scale overload. Remove item to avoid damage. Max. weight capacity is indicated on the scale.

Care and maintenance

1. Take care as the measuring tape edge is sharp.
2. DO NOT bend the measuring tape in case not retractable.

5

www.egkantawalla.com

3. Wipe the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
4. DO NOT stress the triangle ring for long time. During travel, keep the scale away from objects with sharp ends (such as toy, stationery etc.), in case the scale is switched on frequently and consume battery power.
5. To make sure accuracy, DO NOT use this scale in strong -magnetic field.
6. Keep the scale away from babies and children to avoid danger of swallow the batteries and small components.

6

www.egkantawalla.com


Imported & Marketed by:

E. G. Kantawalla Pvt. Ltd.

Survey No. 28/1, Damodar Nagar,
Old Nagar-Mundhwa Road,
Kharadi, Pune - 411 014.

Tel: 020-30418100. Fax: +91-20-30418126,

E-mail: sales@egkantawalla.com

Website : www.egkantawalla.com

7

www.egkantawalla.com


Electronic Multi-Purpose Luggage Scale

USER MANUAL

MODELS: EEL6001A



Specifications

1. With 1m retractable measuring tape
2. Zero/Tare
3. Low power/overload indication
4. LCD digit height: 9mm
5. 50kg
6. 50g
7. Power: 2X1.5V AAA

Key illustration

⊙ : Switch on/off, conversion weight unit, zero/tare

1

www.egkantawalla.com

Weighing


1. Strap the webbing belt through the luggage handle, and secure the hook of the belt onto the triangle ring.
2. Press ⊙ button to switch on the scale before lifting (ensure no stress). You will hear 2 beeps after switching on.
3. When display does not show zero, press ⊙ button to reset LCD to zero.
4. Lift the scale gently. Make sure the scale is horizontal and balanced. LCD shows the weight of luggage. Wait for the weight reading to stop and stabilize, flash 3 times and locked. You will hear 2 beeps after locking on. Usually weight reading will be locked in 2-3 seconds. It will be longer if the weighing object is heavy. Scale will display weight reading for 2 minutes and automatically switch off.

2

www.egkantawalla.com

5. When weight reading is locked, press ⊙ button to reset LCD display to zero. You will hear 1 beep. Then you can start new weighing.
6. Press ⊙ button for 3 seconds to switch the scale off. You will hear 1 beep after switching off


To replace battery

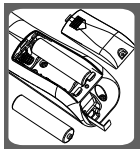

Replace battery when LCD shows "Lo". Open the battery case cover at the bottom of scale, and install 2x1.5V AAA batteries. Please observe the polarity. Close the battery case cover.

3

www.egkantawalla.com

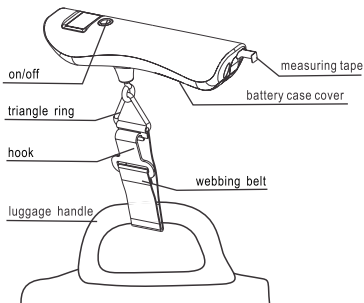

4

www.egkantawalla.com